



INSTRUCTIONS

Applies to Kit Number(s):

90500175 REV A

Kit Description:

This kit is for one chrome Teardrop Mirror Assembly.

Installation Instructions:


Removal

1. Remove OE mirror by loosening the nut at the clutch or front brake master cylinder reservoir (17mm Wrench) and then unscrewing the mirror from the reservoir.
2. Repeat for other side

Installation

3. Screw the new mirror into the reservoir.
4. Adjust the mirror for proper visibility and tighten the nuts at the reservoir and mirror head to 13-17 ft-lbs.

Exploded View of Assembly:

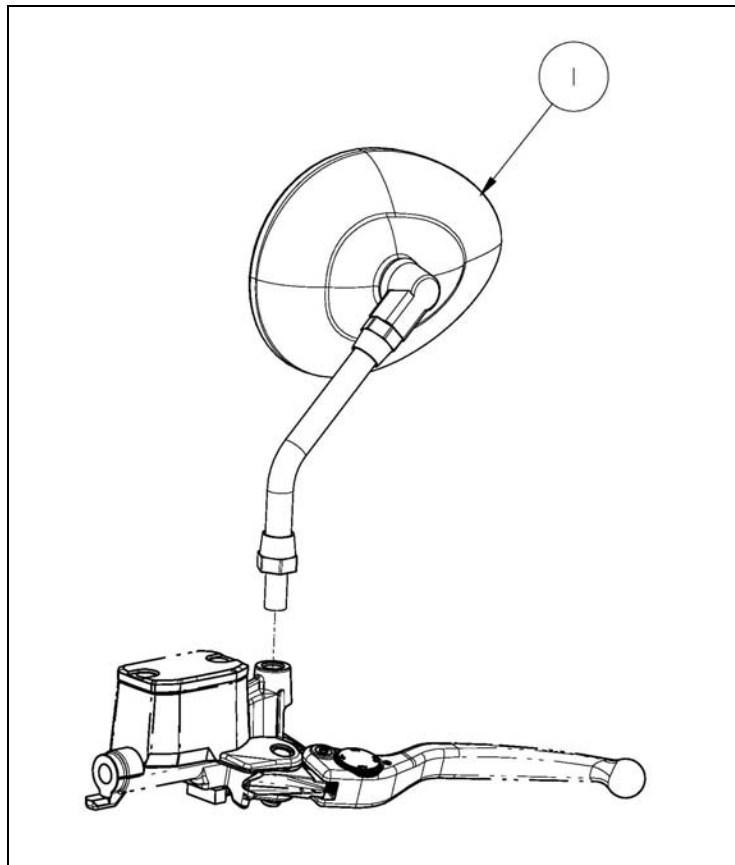

Kit Bill of Material:

ITEM	PART NUMBER	PART DESCRIPTION	QTY
1	52000005	TEARDROP MIRROR ASSEMBLY	1
2	90800066	INSTRUCTION SHEET	1

Additional Kit Requirements:

- None

Kit Retro-fit-ability to Existing Models:

Y: Directly Retro-fit-able

M: Retro-fit-able with some modification, see your local service provider for details

N: Not Retro-fit-able

MODEL YEAR	MODEL FAMILY					
	CHIEF	SCOUT	N/A	N/A	N/A	N/A
1998						
1999						
2000						
2001						
2002						
2003						
2004						
2009 +	Y	N/A				

Disclaimer:

To help maintain the value of your motorcycle and to keep from voiding your factory warranty, please remember that skilled technicians using equipment and methods recommended by IMC are best qualified to perform all major repairs and service including installation of Parts and Accessories. Your authorized Indian Motorcycle Dealer knows your motorcycle best and should be consulted for service and assistance.